

Section 9

Body and Accessories

CONTENTS

Precautions	9-1	Front Turn Signal Light Construction	9B-9
Precautions.....	9-1	Front Turn Signal Light / Rear Turn Signal	
Precautions for Electrical System	9-1	Light Components	9B-9
Component Location	9-1	Front Turn Signal Light Removal and	
Electrical Components Location	9-1	Installation	9B-9
Wiring Systems.....	9A-1	Rear Turn Signal Light Removal and	
General Description	9A-1	Installation	9B-10
Abbreviations	9A-1	Turn Signal Light Bulb Replacement.....	9B-11
Wire / Connector Color Symbols.....	9A-1	Reflex Reflector Construction (If Equipped).....	9B-11
How to Read Terminal Nos.	9A-1	Turn Signal Relay Inspection	9B-12
Glossary	9A-1	Turn Signal Relay Removal and Installation	9B-12
Schematic and Routing Diagram	9A-3	Hazard Switch Inspection.....	9B-12
Wiring Diagram	9A-3	Turn Signal Switch Inspection.....	9B-12
Wiring Harness Routing Diagram.....	9A-7	Passing Light Switch Inspection.....	9B-13
Component Location	9A-13	Dimmer Switch Inspection.....	9B-13
Electrical Components Location	9A-13	Specifications	9B-13
Specifications	9A-13	Tightening Torque Specifications	9B-13
Tightening Torque Specifications.....	9A-13	Combination Meter / Fuel Meter / Horn..	9C-1
Lighting Systems.....	9B-1	General Description	9C-1
Precautions.....	9B-1	Combination Meter System Description.....	9C-1
Precautions for Lighting Systems	9B-1	Diagnostic Information and Procedures	9C-2
Diagnostic Information and Procedures	9B-1	Combination Meter Symptom Diagnosis	9C-2
Headlight Symptom Diagnosis.....	9B-1	Horn Symptom Diagnosis	9C-2
Turn Signal Light and Hazard Light Symptom		Repair Instructions	9C-3
Diagnosis	9B-1	Combination Meter Construction.....	9C-3
Rear Combination Light Symptom Diagnosis	9B-2	Combination Meter Components	9C-4
Repair Instructions	9B-2	Combination Meter On-Vehicle Inspection.....	9C-4
Headlight Construction.....	9B-2	Combination Meter Assembly Removal and	
Headlight / Position Light Components	9B-3	Installation	9C-5
Headlight Removal and Installation	9B-3	Combination Meter Disassembly and	
Position Light Removal and Installation	9B-3	Reassembly	9C-6
Headlight Bulb / Position Light Bulb		Speedometer On-Vehicle Inspection	9C-6
Replacement.....	9B-4	Speed Sensor Removal and Installation	9C-6
Headlight Beam Adjustment	9B-5	Speed Sensor Inspection	9C-6
Rear Lighting System Construction.....	9B-6	ECT Indicator Inspection.....	9C-6
Rear Combination Light / License Plate Light		Fuel Level Indicator Inspection	9C-8
Components.....	9B-7	Fuel Level Gauge Inspection	9C-9
Rear Combination Light Removal and		Freeze Indicator Inspection.....	9C-9
Installation	9B-7	Ambient Air Temperature Sensor Inspection	9C-10
Rear Combination Light Replacement.....	9B-7	Oil Pressure Indicator Inspection	9C-10
License Plate Light Removal and Installation	9B-8	Ignition Switch Inspection.....	9C-10
License Plate Light Bulb Replacement	9B-8	Ignition Switch Removal and Installation.....	9C-11
		Horn Inspection	9C-11
		Horn Removal and Installation	9C-11

9-ii Table of Contents

Specifications	9C-11	Side Lower Cowling / Side Cowling Inner Cover Removal and Installation	9D-14
Tightening Torque Specifications.....	9C-11	Windscreen Removal and Installation	9D-14
Exterior Parts	9D-1	Body Cowling Assembly Removal and Installation	9D-15
Schematic and Routing Diagram	9D-1	Body Cowling Disassembly and Reassembly	9D-15
Seat Lock Cable Routing Diagram.....	9D-1	Windscreen Brace Removal and Installation	9D-17
Repair Instructions	9D-2	Pivot Cover Removal and Installation	9D-18
Body Cowling Construction	9D-2	Battery Holder Removal and Installation	9D-18
Frame Cover Construction	9D-3	Specifications	9D-19
Rear Fender Construction	9D-4	Tightening Torque Specifications	9D-19
Side Cover Cowling Molding Construction	9D-5	Special Tools and Equipment	9D-19
Fuel Tank Side Cover Cushion Construction	9D-6	Recommended Service Material	9D-19
Fuel Tank Center Cover Cushion Construction	9D-7	Body Structure	9E-1
Frame Cover Cushion Construction	9D-7	Repair Instructions	9E-1
Rear Fender (Rear) Cushion Construction	9D-8	Frame Construction	9E-1
Battery Box Cushion Construction	9D-8	Seat Rail Removal and Installation	9E-1
Pivot Cover Cushion Construction	9D-9	Front Footrest Construction	9E-2
Clip Removal and Installation	9D-9	Front Footrest Removal and Installation	9E-2
Seat Removal and Installation	9D-10	Pillion Footrest Construction	9E-2
Sport Carrier Removal and Installation	9D-10	Pillion Footrest Removal and Installation	9E-3
Rear Frame Cover / Frame Cover Removal and Installation	9D-11	Side-stand Construction	9E-3
Rear Fender (Rear) Removal and Installation	9D-11	Side-stand Removal and Installation	9E-3
Rear Fender (Front) Removal and Installation	9D-12	Specifications	9E-3
Side Cowling Cover / Fuel Tank Center Cover Removal and Installation	9D-12	Tightening Torque Specifications	9E-3
Fuel Tank Side Cover / Fuel Tank Front Cover Removal and Installation	9D-13	Special Tools and Equipment	9E-3
		Recommended Service Material	9E-3