



Glossary

English	
ABS CONTROL UNIT	
ABS MOTOR	
ABS VALVE	
AMBIENT AIR TEMP SENSOR	
BATTERY	
CKP SENSOR	
CLUTCH SWITCH	
COOLING FAN MOTOR	
DIMMER/PASSING SWITCH	
ECM	
ECT SENSOR	
ENGINE STOP SWITCH	
EVAP SYSTEM PURGE CONTROL SOLENOID VALVE	
EXCV ACTUATOR	
FAN	
FAN RELAY	
FRONT BRAKE SWITCH	
FRONT TURN SIGNAL LIGHT	
FRONT WHEEL SPEED SENSOR	
FUEL	
FUEL INJECTOR	
FUEL PUMP	
FUEL PUMP RELAY	
FUSE BOX	
GENERATOR	
GP SWITCH	
HANDLEBAR SWITCH	
HAZARD SWITCH	
HEAD HI	
HEAD LO	
HEADLIGHT	
HI	
HO2 SENSOR	
HORN	
HORN BUTTON	
IAP SENSOR	
IAT SENSOR	
IF EQUIPPED	
IGNITION	
IGNITION COIL	
IGNITION SWITCH	
IMMOBILIZER ANTENNA	
LEFT HANDLEBAR SWITCH	
LH	
LICENSE PLATE LIGHT	

LO	
MAIN	
MODE SWITCH	
OIL PRESSURE SWITCH	
POSITION LIGHT	
POWER SOURCE	
REAR BRAKE LIGHT SWITCH	
REAR COMBINATION LIGHT	
REAR TURN SIGNAL LIGHT	
REAR WHEEL SPEED SENSOR	
REGULATOR RECTIFIER	
RH	
SELECT SWITCH	
SIDE-STAND DIODE	
SIDE-STAND RELAY	
SIDE-STAND SWITCH	
SIGNAL	
SPEEDOMETER	
STARTER BUTTON	
STARTER MOTOR	
STARTER RELAY	
STV ACTUATOR	
TO SENSOR	
TP SENSOR	
TURN SIGNAL RELAY	
TURN SIGNAL SWITCH	