

9B



## Rear Combination Light Symptom Diagnosis

Condition	Possible Cause	Action
<b>All lights do not light up</b>	Wiring or grounding faulty.	Repair wiring.
	Bulbs (LED) blown.	Replace rear combination light assembly and check short circuit.
<b>Some lights do not light up</b>	Wiring or grounding faulty.	Repair wiring.
	Front brake light switch faulty.	Check front brake light switch.
<b>Brake light do not light up</b>	Rear brake light switch faulty.	Check rear brake light switch.
	Wiring or grounding faulty.	Repair wiring.
	Rear combination light bulbs (LED) faulty.	Replace rear combination light assembly.
	Front brake light switch faulty.	Check front brake light switch.
<b>Brake light stay on</b>	Rear brake light switch faulty.	Check rear brake light switch.
	Rear combination light bulb (LED) faulty.	Replace rear combination light assembly.