

9B



## Rear Turn Signal Light Removal and Installation


[Reference: Rear Lighting System Construction](#)

**NOTE:**

The same procedures is applicable to both the right and left lights.


### Removal

- 1) Remove the rear fender (rear).
- 2) Disconnect the rear turn signal light coupler (1) and/or (2).

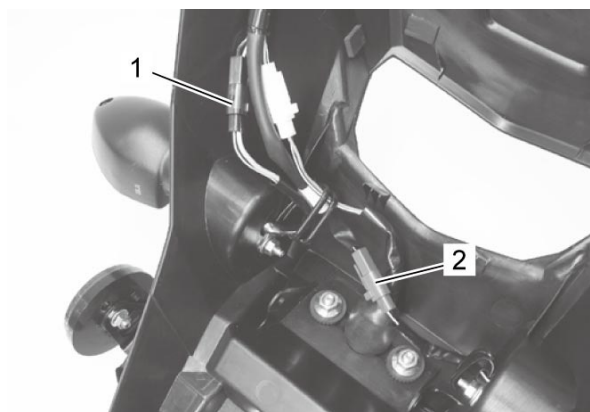

1.	Right side (Black)	2.	Left side (Gray)
----	--------------------	----	------------------

- 3) Remove the nut (1), clamp (2) and remove the rear turn signal light (3).

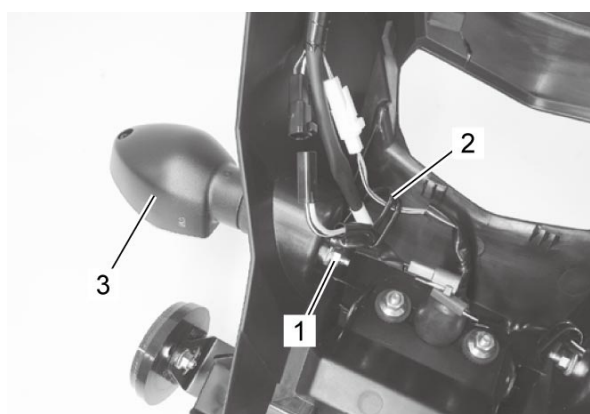

### Installation

Install the rear turn signal light in the reverse order of removal. Pay attention to the following point:

- Tighten the rear turn signal light mounting nut (1) to the specified torque.

#### Tightening torque

**Rear turn signal light mounting nut (a): 1.8 N·m (0.18 kgf-m, 1.5 lbf-ft)**

