

9B



## Turn Signal Relay Inspection

Refer to [Electrical Components Location](#).

**NOTE:**

**Make sure that the battery is fully charged.**

Before removing the turn signal relay, check the operation of the turn signal light.

If the turn signal light does not illuminate, inspect the bulb, turn signal switch and circuit connection.

If the bulb, turn signal switch and circuit connection are OK, the turn signal relay may be faulty; therefore, replace the turn signal relay with a new one. 