


9B



## Turn Signal Relay Removal and Installation

### Removal

- 1) Turn the ignition switch OFF.
- 2) Remove the seat.
- 3) Remove the turn signal relay (1).

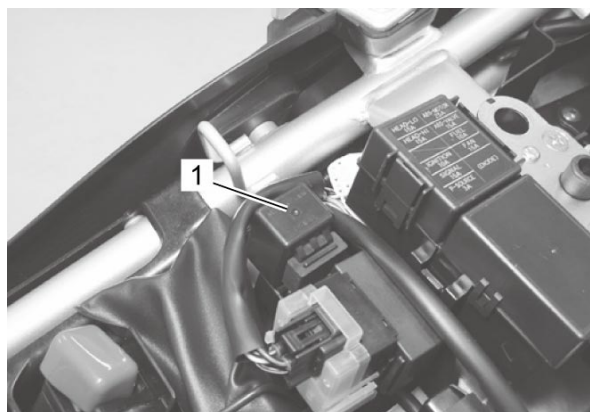

### Installation

Install the turn signal relay in the reverse order of removal.