
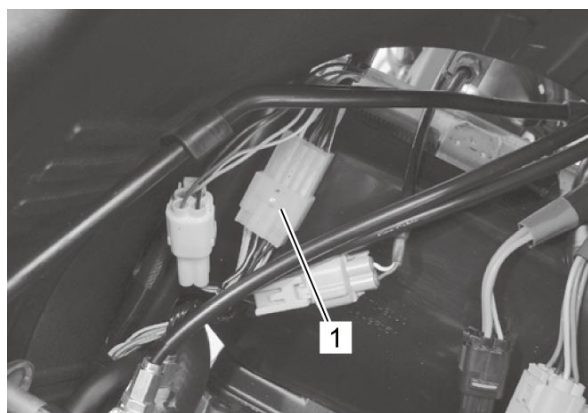



9B





Passing Light Switch Inspection

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. 
- 3) Disconnect the left handlebar switch coupler (1).



- 4) Inspect the passing light switch for continuity with a circuit tester.
If any abnormality is found, replace the left handlebar switch assembly with a new one. 

Color Position	P	B/G
•		
PUSH		



- 5) After finishing the passing light switch inspection, reinstall the removed parts.