

9B




Headlight Removal and Installation

[Reference: Headlight Construction](#)

Removal

- 1) Remove the body cowl from cowl brace.
- 2) Remove the headlight (1).

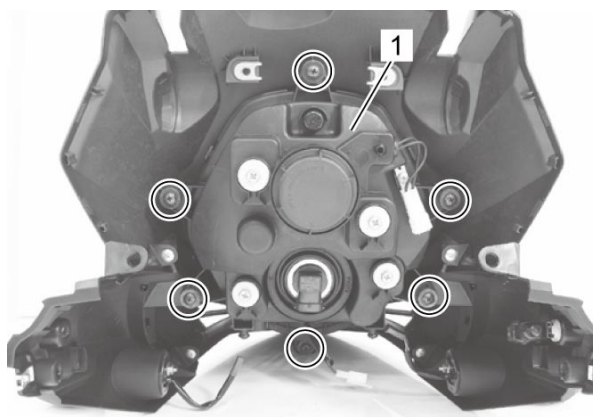


Installation

Install the headlight in the reverse order of removal. Pay attention to the following points:

- Tighten the screws (1) to the specified torque.

Tightening torque

Headlight mounting screw (a): 2 N·m (0.2 kgf-m, 1.5 lbf-ft)

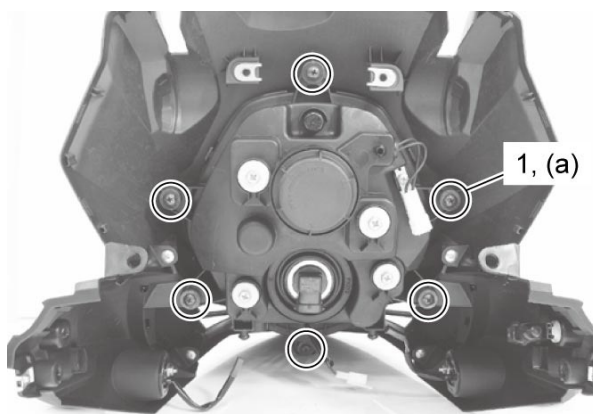

- After installing, be sure to inspect the headlight beam.