


9B



## Position Light Removal and Installation

### Removal

- 1) Disconnect the position light coupler (1).
- 2) Turn the position light (2) counterclockwise and remove it.

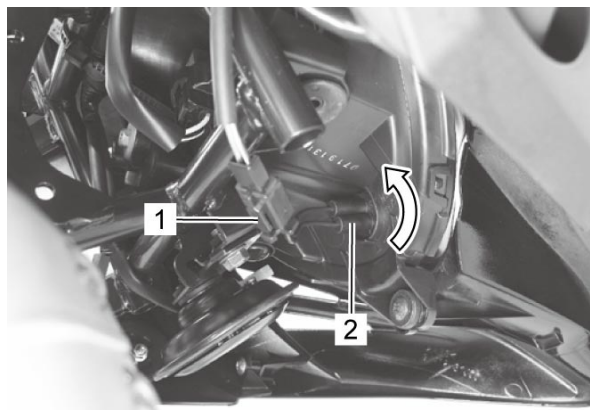

### Installation

Install the position light in the reverse order of removal.