

9B



Headlight Bulb / Position Light Bulb Replacement


[Reference: Headlight / Position Light Components](#)

⚠ CAUTION:


As the headlight bulb operates at a high temperature, handle the bulb after sufficiently cooled.

Low Beam Bulb


- 1) Remove the combination meter.
- 2) Remove the cap (1).

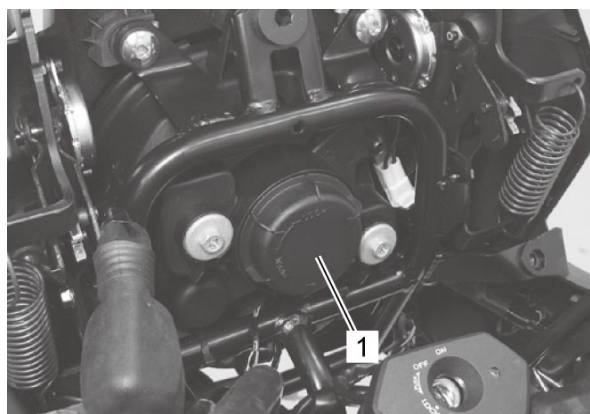

- 3) Disconnect the headlight coupler (1).

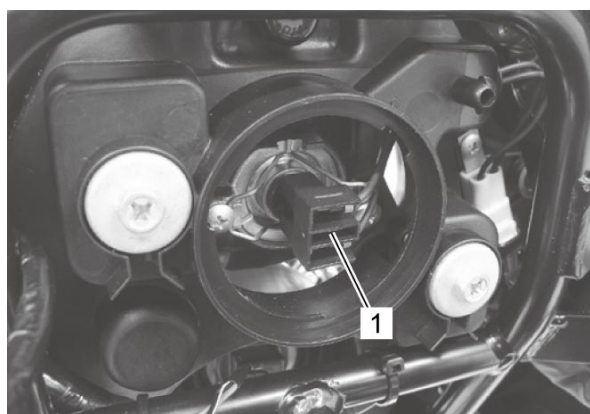

- 4) Unhook the bulb holder spring (1) and remove the headlight bulb (2).

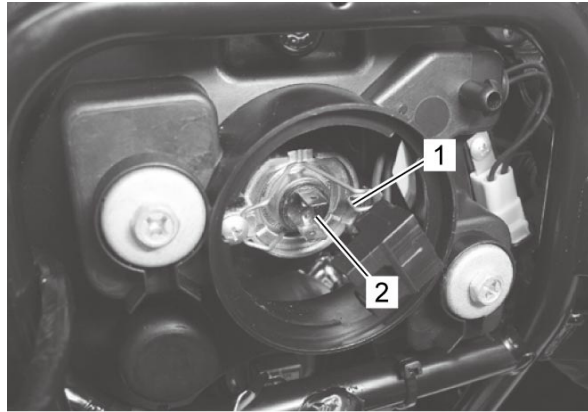


5) After finishing the headlight bulb replacing, install the removed parts.


6) After installing the removed parts, be sure to inspect the headlight beam. 🛠️

High Beam Bulb

1) Disconnect the headlight coupler (1) and remove the bulb socket rubber cap (2).

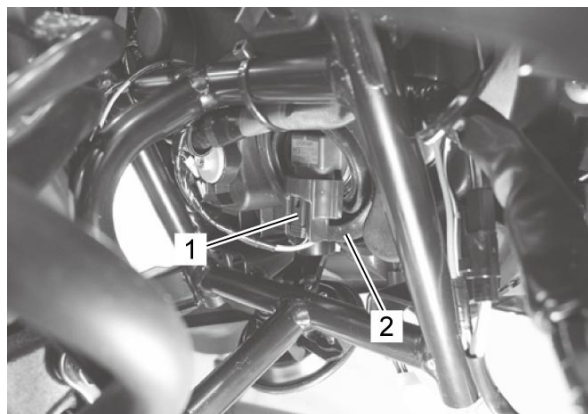


2) Turn the headlight bulb (1) counterclockwise and remove it.

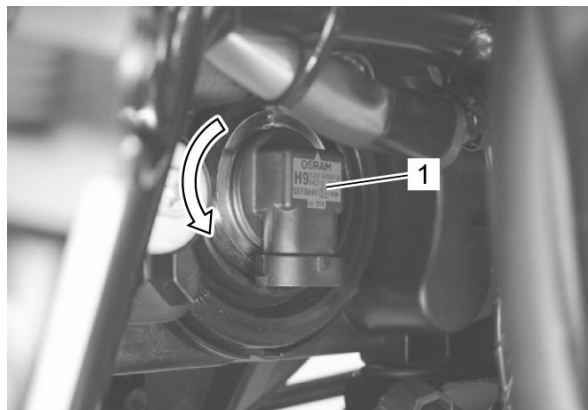

Position Light Bulb

- 1) Turn the socket (1) counterclockwise and remove it.

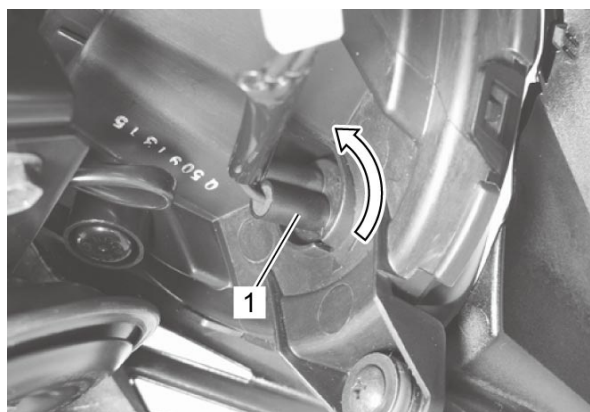

- 2) Replace the position light bulb (1).



- 3) Install the socket.