


9B



Headlight Beam Adjustment

- 1) Adjust the headlight beam horizontally turning the bolt (1) by a screwdriver from the bottom side.
- 2) Adjust the headlight beam vertically turning the bolt (2) by a screwdriver from the bottom side.

High beam

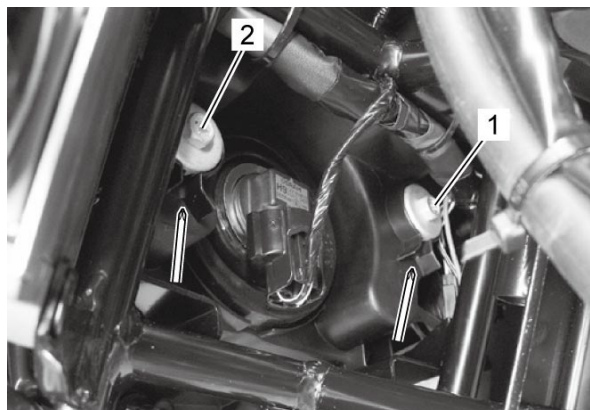

Low beam

