

9B




## License Plate Light Removal and Installation

[Reference: Rear Lighting System Construction](#)

### Removal

- 1) Remove the rear fender (rear).
- 2) Disconnect the license plate light lead wire coupler (1) and release the clamp (2).
- 3) Remove the nuts (3), license plate light assembly (4) and spacers (5).

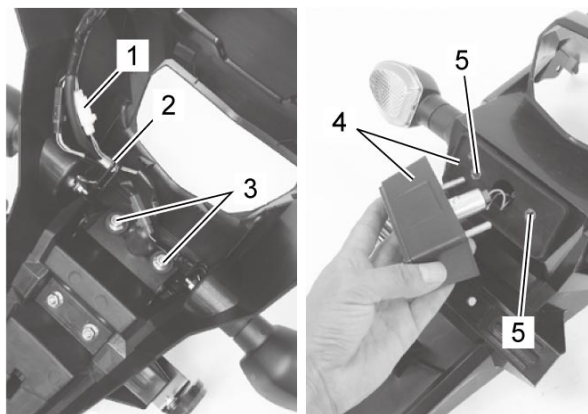

### Installation

Install the license plate light in the reverse order of removal. Pay attention to the following point:

- Tighten the license plate light mounting nuts (1) to the specified torque.

#### Tightening torque

**License plate light mounting nut (a): 5 N·m (0.5 kgf-m, 4.0 lbf-ft)**

