

9B



Front Turn Signal Light Removal and Installation


[Reference: Front Turn Signal Light Construction](#)

NOTE:

The same procedures is applicable to both the right and left lights.


Removal

- 1) Disconnect the front turn signal light lead wire coupler (1) and/or (2).

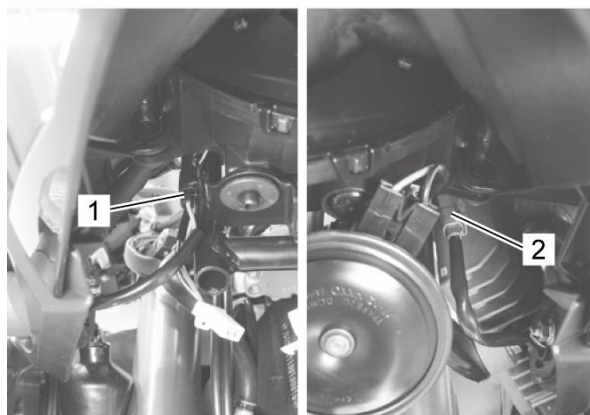

1. Right side (Black)	2. Left side (Gray)
-----------------------	---------------------

- 2) Remove the nut (1), plate (2) and front turn signal light (3).

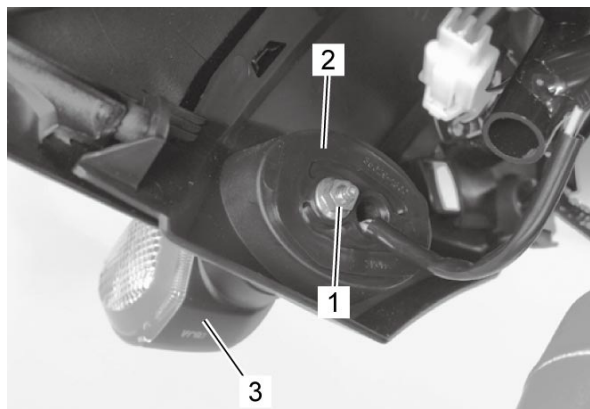

Installation

Install the front turn signal light in the reverse order of removal. Pay attention to the following point:

- Tighten the front turn signal light mounting nut (1) to the specified torque.

Tightening torque

Front turn signal light mounting nut (a): 1.3 N·m (0.13 kgf-m, 1.0 lbf-ft)

