


 



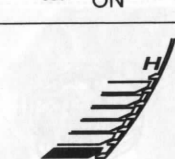

 


9C-7 Combination Meter / Fuel Meter / Horn:

- 4) Check the LCD operation when the resistance is adjusted to the specified values.
If either one or all indications are abnormal, replace the combination meter with a new one. (Page 9C-5)

Engine coolant temperature meter	Temperature and resistance
 Flicker	 116 °C (241 °F) Approx. 122 Ω
 ON	 113 °C (236 °F) Approx. 131 Ω 114 °C (238 °F) Approx. 128 Ω
 ON	110 °C (230 °F) Approx. 141 Ω 111 °C (232 °F) Approx. 138 Ω
 ON	70 °C (158 °F) Approx. 427 Ω 108 °C (227 °F) Approx. 149 Ω
 ON	50 °C (122 °F) Approx. 811 Ω 68 °C (155 °F) Approx. 454 Ω
 ON	40 °C (104 °F) Approx. 1149 Ω 48 °C (119 °F) Approx. 868 Ω
 ON	 38 °C (101 °F) Approx. 1235 Ω

[A]: When decreasing the temperature

[B]: When increasing the temperature