


Fuel Level Indicator Inspection


BENE31J19306009

- 1) Lift and support the fuel tank. (Page 1G-9)
- 2) Disconnect the fuel pump coupler (1).

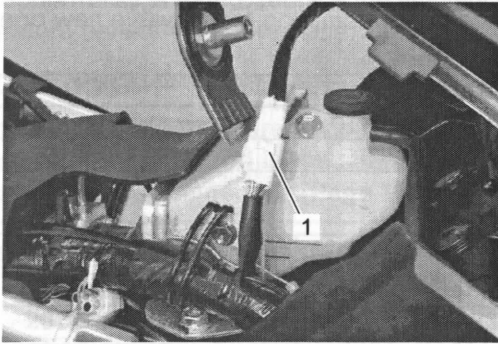

IE31J1930011-03

- 3) Connect variable resistor (1) between the Y/R and B/W lead wires from the wire harness.

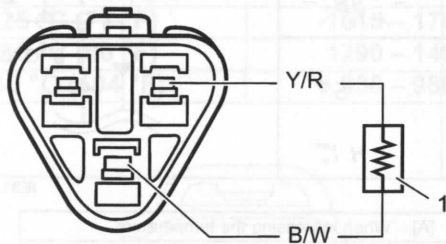

IE31J1930012-01

- 4) Turn the ignition switch ON.

- 5) Check the display of fuel level indicator (LCD) as shown.
If any abnormality is found, replace the combination meter with a new one. (Page 9C-5)

NOTE

It takes approx. 40 seconds that the fuel level indicator indicates the detected fuel level.

Resistance	Fuel level indicator
188.8 – 211.6 Ω	
131.2 – 149.8 Ω	
98.6 – 112.4 Ω	
66.9 – 77.0 Ω	
41.2 – 48.2 Ω	
13.6 – 16.5 Ω	

IE31J1930013-03