

Fuel Level Gauge Inspection


BENE31J19306010

Refer to "Fuel Level Gauge Inspection" in Section 1G (Page 1G-13).

Freeze Indicator Inspection


BENE31J19306011

- 1) Remove the right side cowling cover. (Page 9D-12)
- 2) Remove the ambient air temperature sensor (1).

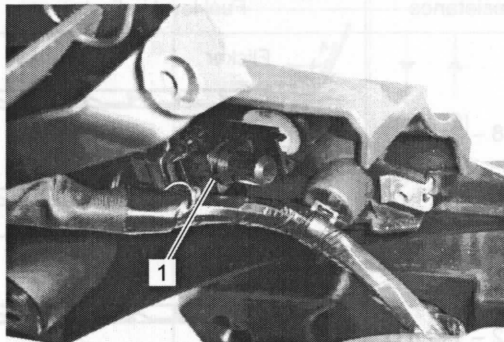

IE31J1930014-01

- 3) Disconnect the ambient air temperature sensor coupler and connect the variable resistor (1) between the terminals.

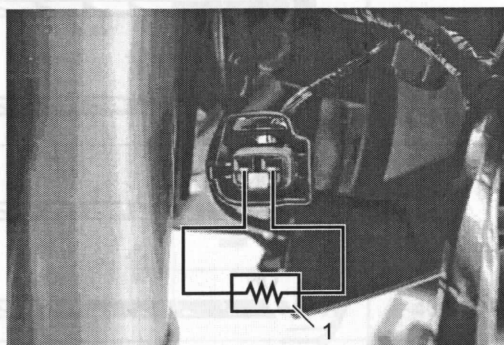

IE31J1930015-01

- 4) Turn the ignition switch ON.

- 5) Check the ambient air temperature meter (LCD) (1) and freeze indicator light (LED) (2) operations when the resistance is adjusted to the specified values. If either one or both indications are abnormal, replace the combination meter with a new one. (Page 9C-5)


Resistance	LCD
9300 Ω or more	Lo
600 Ω or less	HI

Freeze indicator light (LED) (2)	Ambient air temperature indicator (LCD) (1)	Temperature
Flicker 	Flicker 3 ^{AIR} 38 ^{AIR}	
OFF 	5 ^{AIR} 4 ^{AIR}	

IE31J1930016-03

[A]: When increasing the temperature

[B]: When decreasing the temperature

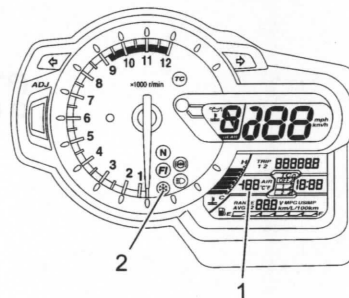

IE31J1930030-01

- 6) Connect the ambient air temperature sensor coupler.