


9D-10 Exterior Parts:


- 3) Push in the head of center piece until it becomes flush with the clip outside face.

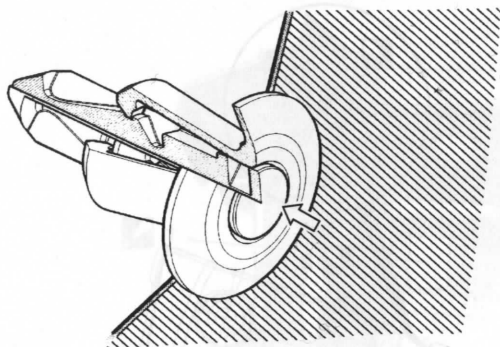

I649G1940007-02

Type 2 Removal


- 1) Pull up the center piece.
- 2) Remove the clip.

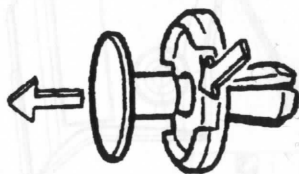

ID26J1940171-02

Installation

- 1) Keep the pin pulled out to close the claws.
- 2) Set the clip into the fitting hole.
- 3) Push in the center piece.

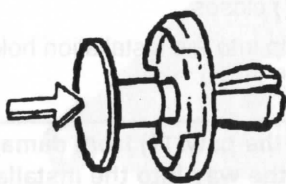


ID26J1940172-02

Seat Removal and Installation

BENE31J19406037

Removal


- 1) Unlock the seat with the ignition key (1).
- 2) Remove the seat.

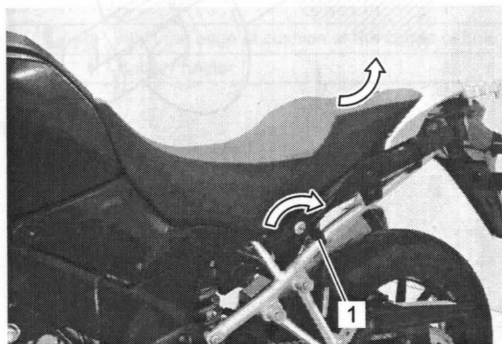

IE31J1940001-01

Installation

Slide the seat hooks into the seat hook retainers and push down firmly until the seat snaps into the locked position.

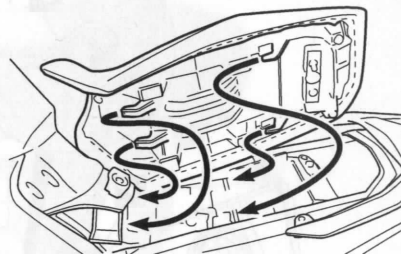


IE31J1940051-01

Sport Carrier Removal and Installation

BENE31J19406061

Removal

- 1) Remove the seat. (Page 9D-10)
- 2) Remove the sport carrier (1).

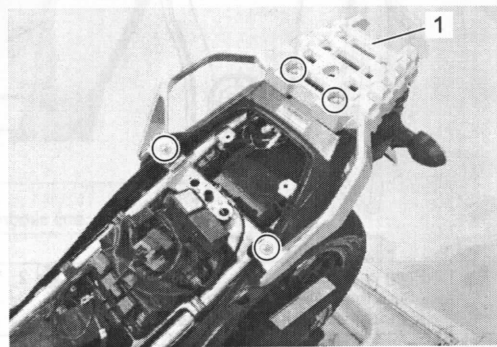

IE31J1940002-01

Installation

Install the sport carrier in the reverse order of removal. Pay attention to the following points:


- Apply thread lock to the sport carrier bolts (1).

"A": Thread lock cement 99000-32150 (THREAD LOCK CEMENT 1322D)

- Tighten the sport carrier bolts (1) to the specified torque.

Tightening torque

Sport carrier bolt (a): 27.5 N·m (2.75 kgf-m, 20.0 lbf-ft)

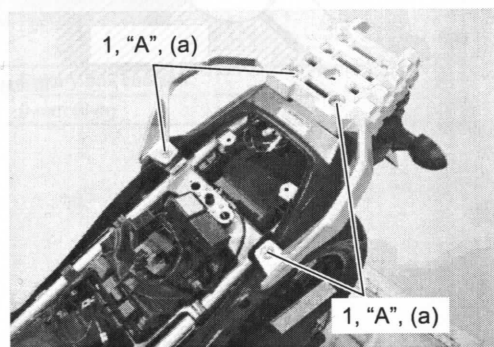

IE31J1940003-01