

Rear Frame Cover / Frame Cover Removal and Installation


BENE31J19406062

NOTE

To removal and installation the rear frame cover and frame cover, the same procedures is applicable to both the right and left parts.


Removal

- 1) Remove the seat. (Page 9D-10)
- 2) Remove the rear frame cover (1).

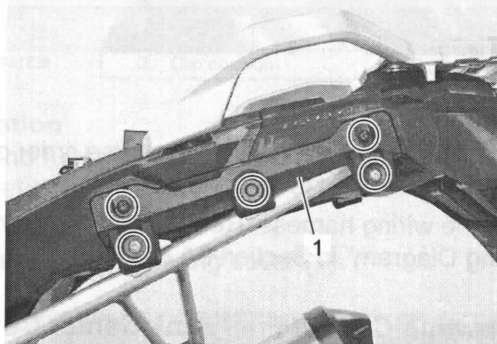


IE31J1940005-03

- 3) Remove the sport carrier. (Page 9D-10)
- 4) Disconnect the seat lock cable (1).

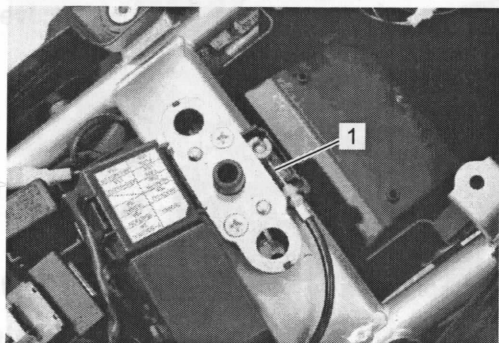

IE31J1940004-01

- 5) Remove the clip (1), screws (2) and frame cover (3).

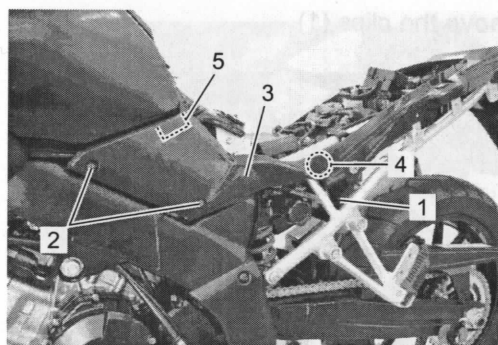


IE31J1940006-02

4. Bushing

5. Hooked point

- 6) Remove the seat lock cable (1), seat lock plate (2), guide (3) and seat lock (4).

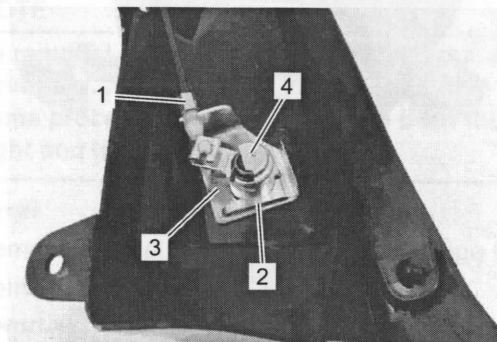


IE31J1940007-01

Installation

Install the frame cover and rear frame cover in the reverse order of removal. Pay attention following point:

- Install the rear frame cover (1) and tighten the screws in order of [a] → [b] → [c].

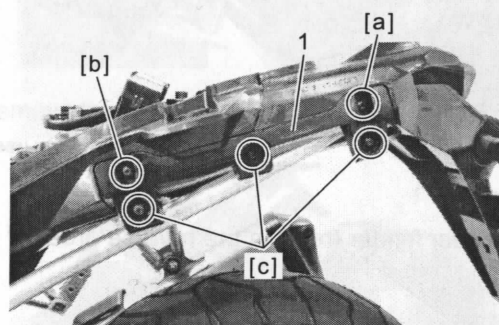


IE31J1940055-01

Rear Fender (Rear) Removal and Installation

BENE31J19406063

Removal

- 1) Remove the seat. (Page 9D-10)
- 2) Remove the sport carrier. (Page 9D-10)
- 3) Remove the rear frame cover. (Page 9D-11)
- 4) Disconnect the turn signal/license plate light lead wire coupler (1).

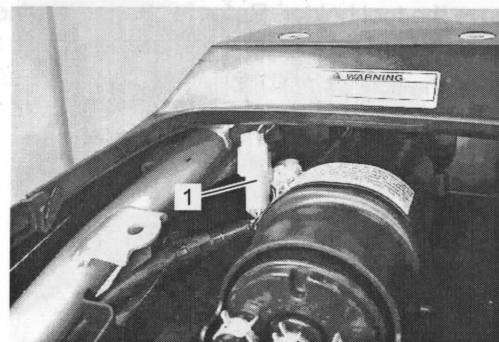

IE31J1940008-02