



9D-12 Exterior Parts:

- 5) Remove the clips (1).

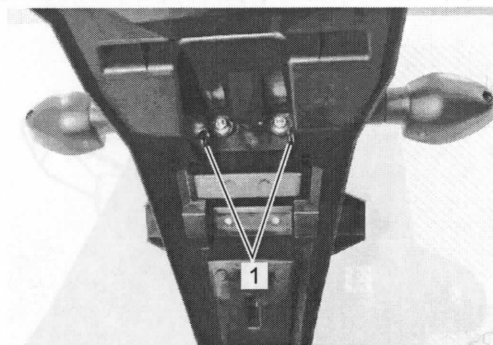

IE31J1940009-01

- 6) Remove the rear fender (rear) (1).

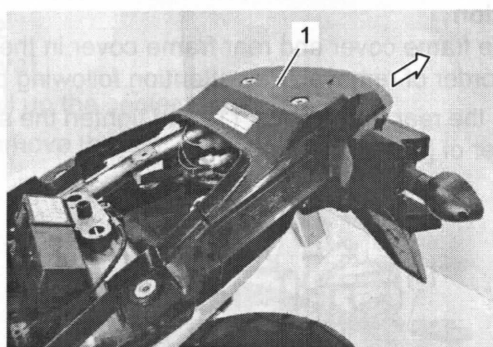

IE31J1940010-02

Installation


Install the rear fender (rear) in the reverse order of removal.

Rear Fender (Front) Removal and Installation

BENE31J19406064

Removal


- 1) Remove the seat. (Page 9D-10)
- 2) Remove the sport carrier. (Page 9D-10)
- 3) Remove the frame covers. (Page 9D-11)
- 4) Remove the rear fender (rear). (Page 9D-11)
- 5) Remove the EVAP canister (If equipped). (Page 1B-7)
- 6) Remove the rear combination light. (Page 9B-7)
- 7) Remove the tool holder. Refer to "Battery Removal and Installation" in Section 1J (Page 1J-10).
- 8) Remove the screws (1).

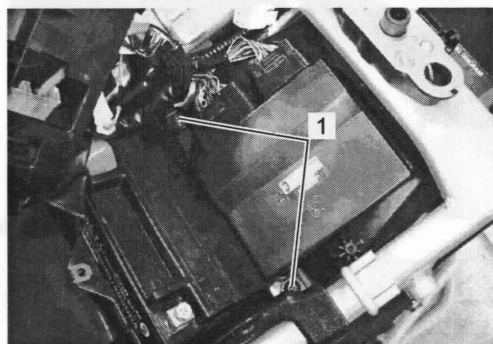

IE31J1940011-02

- 9) Remove the wiring harness (1) and bolts (2).

- 10) Remove the rear fender (front) (3).

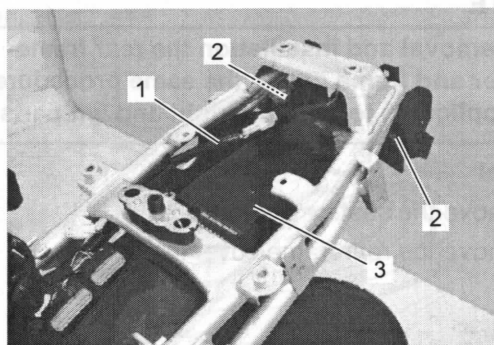

IE31J1940012-02

Installation

Install the rear fender (front) in the reverse order of removal. Pay attention to the following point:


- Route the wiring harness. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

Side Cowling Cover / Fuel Tank Center Cover Removal and Installation

BENE31J19406065


Removal

- 1) Remove the seat. (Page 9D-10)
- 2) Remove the screws (1) and side cowling covers (2).

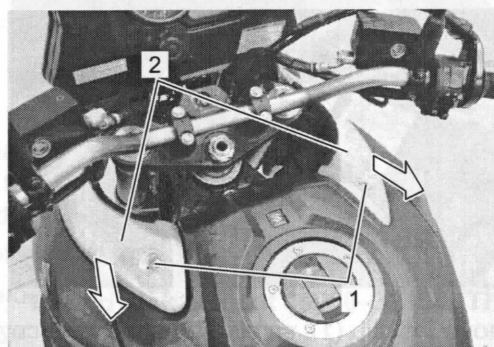

IE31J1940013-01

- 3) Remove the clips (1).

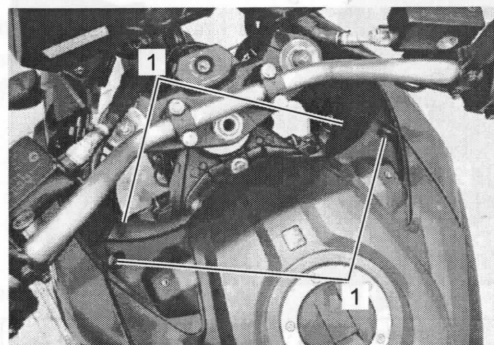

IE31J1940014-01