


- 4) Remove the screw (1) and fuel tank center cover (2).

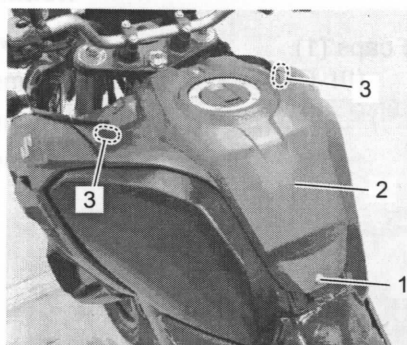


IE31J1940015-01

3. Clip position

### Installation

Install the fuel tank center cover and side cowling cover in the reverse order of removal. Pay attention to the following points:

- Install the side cowling cover (1).

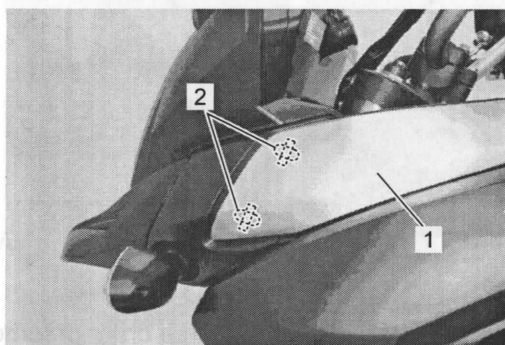


IE31J1940016-03

2. Hooked point

- Tighten the screws (1) to the specified torque.

### Tightening torque

Rear cowling screw (a): 5.5 N·m (0.55 kgf-m, 4.0 lbf-ft)

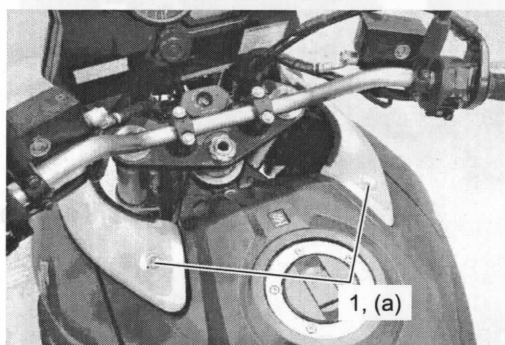

IE31J1940057-01

## Fuel Tank Side Cover / Fuel Tank Front Cover Removal and Installation


BENE31J19406066

### NOTE

To removal and Installation the fuel tank side cover and fuel tank side inner cover, the same procedures is applicable to both the right and left parts.


### Removal

- 1) Remove the fuel tank center cover. (Page 9D-12)
- 2) Remove the wiring harness (1).

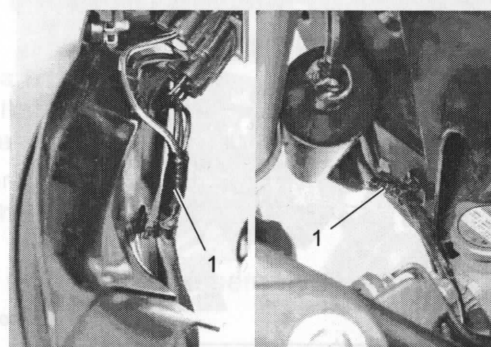

IE31J1940017-01


- 3) Remove the screws (1) and fuel tank side cover (2).

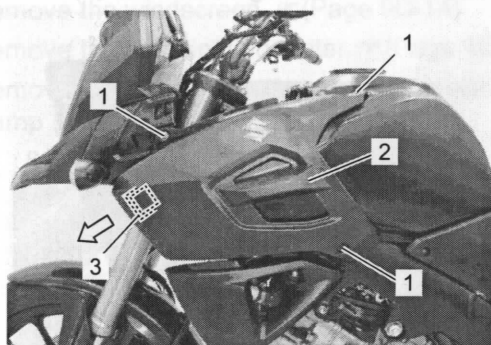

IE31J1940018-01

3. Hooked point

- 4) Remove the fuel tank front cover (1).

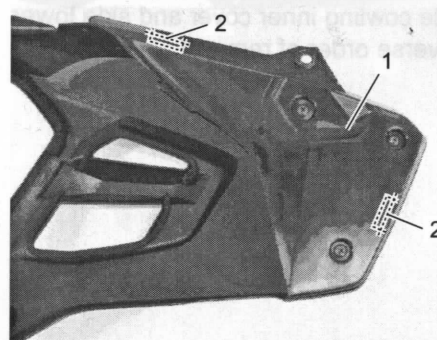

IE31J1940019-03

2. Hooked point

### Installation

Install the fuel tank front cover and fuel tank side cover in reverse order of removal.