

9D-14 Exterior Parts:

Side Lower Cowling / Side Cowling Inner Cover Removal and Installation


BENE31J19406067

NOTE

To removal and installation the side lower cowling and side cowling inner cover, the same procedures is applicable to both the right and left parts.

Removal


- 1) Remove the screw (1) and side lower cowling (2).

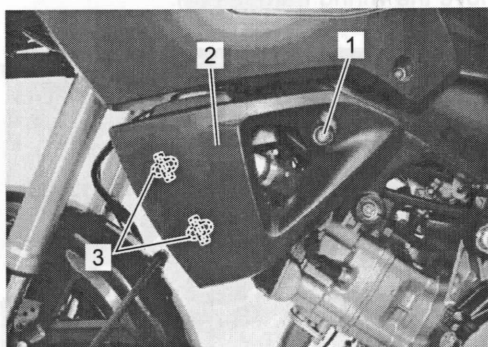

IE31J1940020-01

3. Hooked point

- 2) Remove the side cowling inner cover (1).

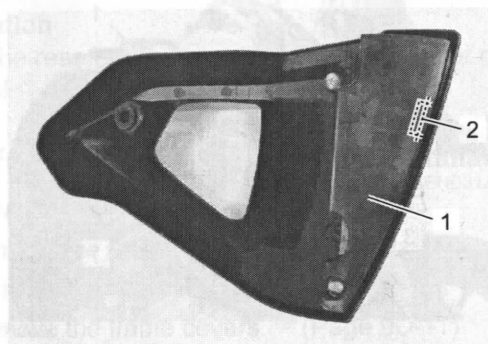

IE31J1940021-02

2. Hooked point

Installation


Install the side cowling inner cover and side lower cowling in reverse order of removal.

Windscreen Removal and Installation

BENE31J19406068


Removal

- 1) Remove the caps (1).

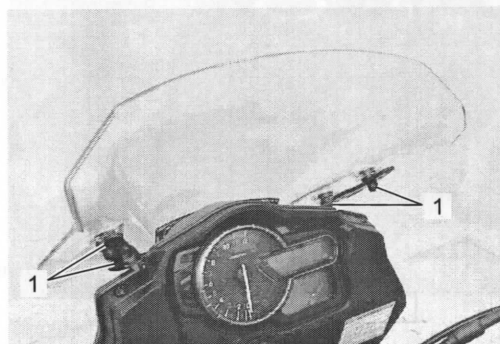

IE31J1940052-01

- 2) Remove the bolts (1) and windscreen (2).

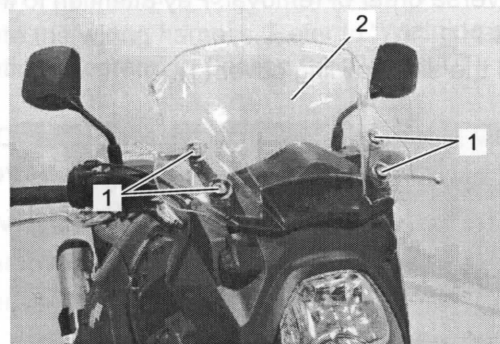

IE31J1940022-01

Installation

Install the windscreen in the reverse order of removal.