


Body Cowling Assembly Removal and Installation

BENE31J19406069

Removal

- 1) Remove the seat. (Page 9D-10)
- 2) Remove the side cowling cover. (Page 9D-12)
- 3) Remove the screws (1).

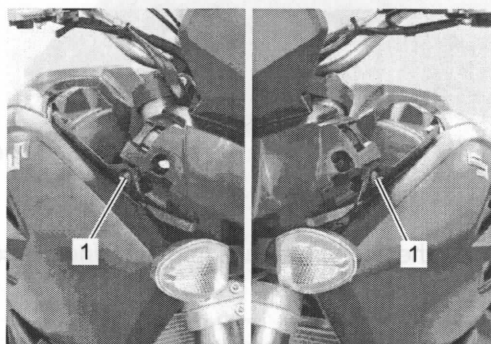


IE31J1940023-01

- 4) Disconnect the lead wire couplers (1).




IE31J1940053-01

- 5) Remove the bolts (1).

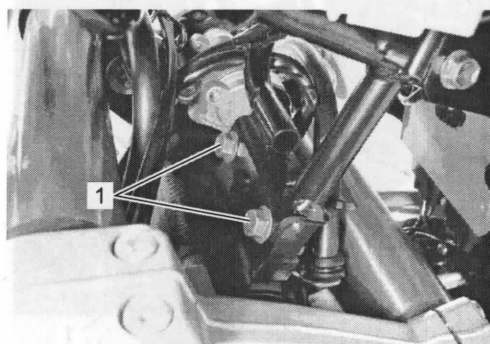


IE31J1940025-01

- 6) Remove the body cowling assembly (1).

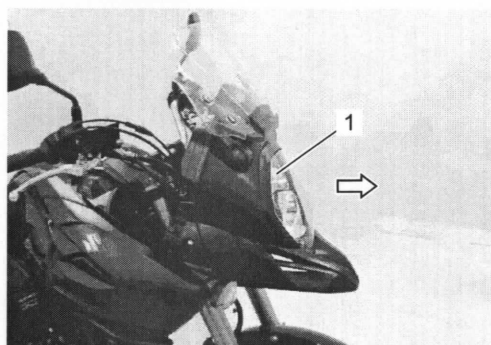

IE31J1940026-01

- 7) Hold the body cowling assembly and disconnect the regulator/rectifier couplers (1).

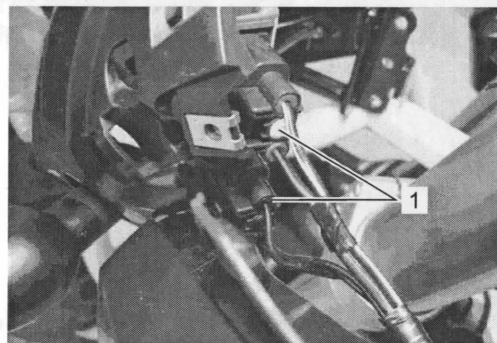

IE31J1940027-01

Installation

Install the body cowling assembly in the reverse order of removal. Pay attention to the following point:


- After installation of the body cowling assembly, check the headlight aiming. (Page 9B-5)

Body Cowling Disassembly and Reassembly

BENE31J19406070

Disassembly

- 1) Remove the body cowling assembly. (Page 9D-15)
- 2) Remove the windscreen. (Page 9D-14)
- 3) Remove the combination meter. (Page 9C-5)
- 4) Remove the ambient air temperature sensor (1) and clamp (2).

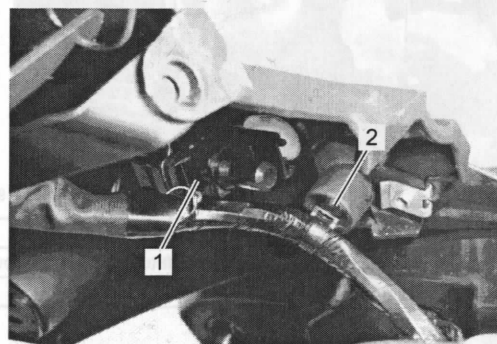

IE31J1940028-01