



**Reassembly**

Assemble the body cowling in the reverse order of disassembly. Pay attention to the following points:

- Assemble the body cowling (1), lower cowling (2) and front side covers (3).

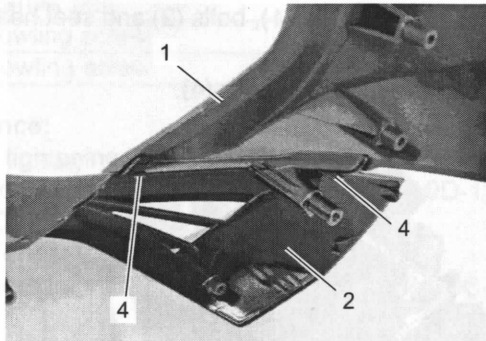


IE31J1940035-01

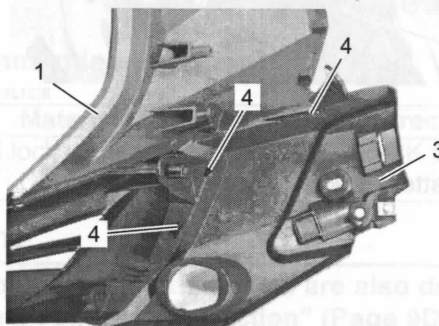

IE31J1940036-01

4. Hooked point

- Assemble the cowling brace and body cowling.

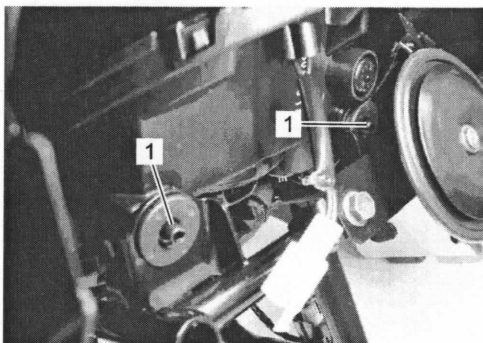


IE31J1940037-01

1. Bushing

- Tighten the screws to the specified torque.

**Tightening torque**

Body cowling screw (a): 5.5 N·m (0.55 kgf-m, 4.0 lbf-ft)

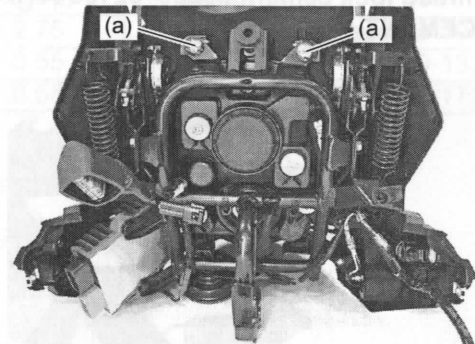

IE31J1940056-01

- After installation of the body cowling assembly, check the headlight aiming. (Page 9B-5)

**Windscreen Brace Removal and Installation**


BENE31J19406071

**NOTE**

To removal and installation the cowling brace, the same procedures is applicable to both the right and left brace.

**Removal**

- Remove the body cowling assembly from the cowling brace. (Page 9D-15)
- Remove the windscreen brace (1).

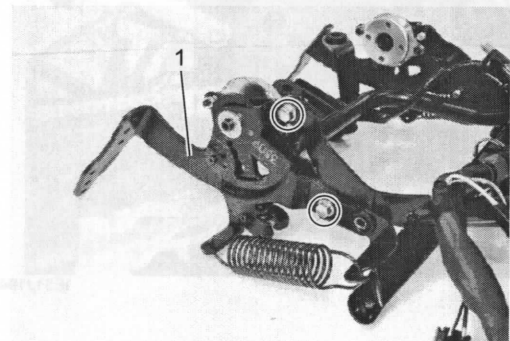

IE31J1940038-02