

REVISED MAINTENANCE SCHEDULE FOR DL650AL5 MODELS

Interval: The service interval should be based on the odometer reading or on calendar months, whichever occurs first.

Item	Interval					
	km	1000	12000	24000	36000	48000
	miles	600	7500	15000	22500	30000
	months	2	12	24	36	48
Air cleaner element		—	I	I	R	I
Exhaust pipe bolts and muffler bolts		T	T	T	T	T
Valve clearances		Inspect every 24000 km (15000 miles)				
Spark plugs		—	R	R	R	R
Fuel lines		—	I	I	I	I
Engine oil		R	R	R	R	R
Engine oil filter		R	—	R	—	R
Idle speed		I	I	I	I	I
Throttle cable play		I	I	I	I	I
Throttle valve synchronization		—	I	I	I	I
Cooling system		—	I	I	I	I
Engine coolant	"Suzuki SUPER Long Life" coolant" (Blue)	—	—	—	—	R
	"Suzuki Long Life" coolant (Green) or an engine coolant other than "Suzuki SUPER Long Life coolant" (Blue)	—	—	R	—	R
Radiator hoses		—	I	I	I	I
Clutch cable play		—	I	I	I	I
Drive chain		Clean and lubricate every 1000 km (600 miles).				
Brakes		I	I	I	I	I
Brake hoses		—	I	I	I	I
Brake fluid		Inspect every year or 7500 km. Replace every 2 years.				
Tyres		—	I	I	I	I
Steering		I	I	I	I	I
Front forks		—	I	I	I	I
Rear suspension		—	I	I	I	I
Chassis bolts and nuts		T	T	T	T	T
Lubrication		Lubricate at every 1000 km (600 miles).				

NOTE:

- This table shows the service schedule up to 30,000 miles or 48 months.
- A first service is due after 600 miles or 2 months, whichever occurs first.
- Beyond 30,000 miles or 48 months repeat the schedule from 7500 miles.
- I = Inspect and clean, adjust, replace or lubricate as necessary;
R = Replace; T = Tighten; C = Clean; L = Lubricate