


1E



Oil Strainer / Oil Pressure Regulator Removal and Installation

Removal

- 1) Remove the clutch cover and gasket.
- 2) Remove the oil strainer (1) and oil pressure regulator (2).

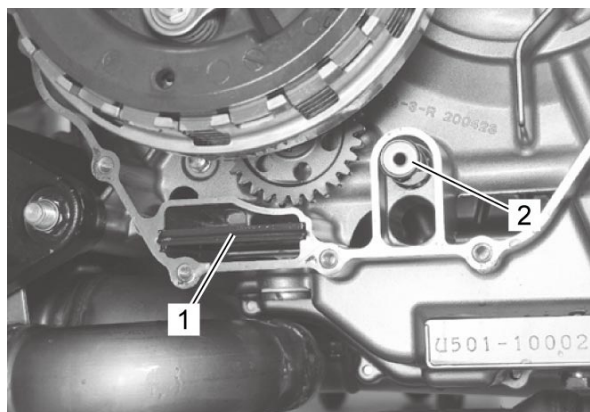

Installation


[Reference: Oil Strainer Inspection and Cleaning](#)

[Reference: Oil Pressure Regulator Inspection](#)


- 1) Install the oil strainer (1).

NOTICE:

When installing the oil strainer, fit the convex part (2) of the oil strainer into the hole (3) of the crankcase.

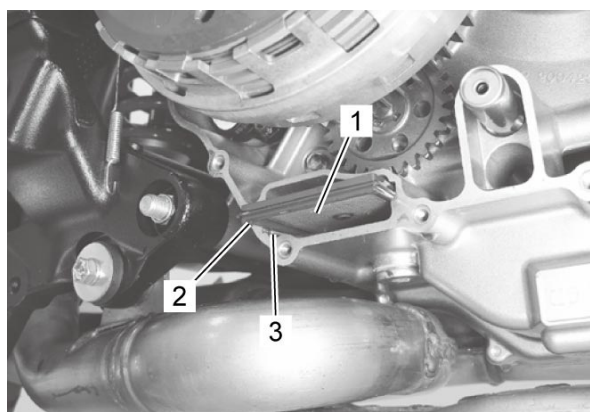

- 2) Apply grease to the new O-ring.
"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)
- 3) Install the oil pressure regulator (1).

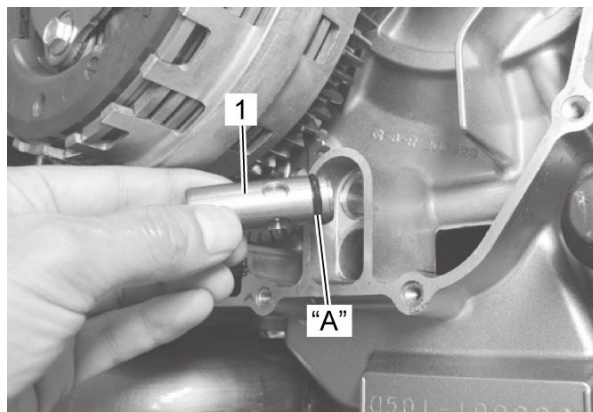

4) Install the clutch cover. 