


1F



Radiator Cap Inspection

Refer to [Engine Cooling System Inspection](#).

- 1) Remove the right fuel tank side cover.
- 2) Remove the radiator cap (1).

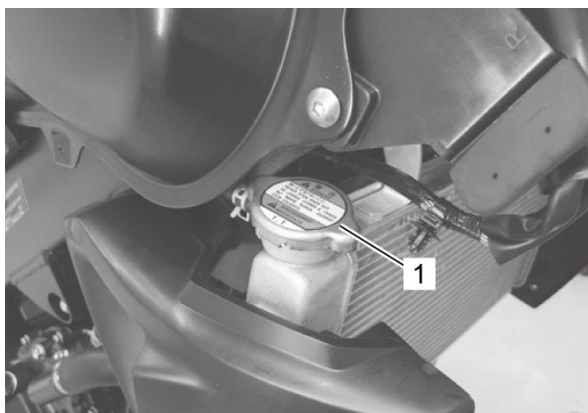

- 3) Attach the radiator cap (1) to the special tool as shown in the figure.
- 4) Slowly apply pressure to the radiator cap.
If the radiator cap does not hold the pressure for at least 10 seconds, replace it with a new one.

Special Tool

(A): [09918-78211](#)

(B): [09918-78220](#)

Radiator cap release pressure

108 – 137 kPa (1.1 – 1.4 kgf/cm², 15.4 – 19.5 psi)

