1G

Fuel Pump Relay Inspection

1) Remove the seat. ☞

2) Remove the fuel pump relay (1).

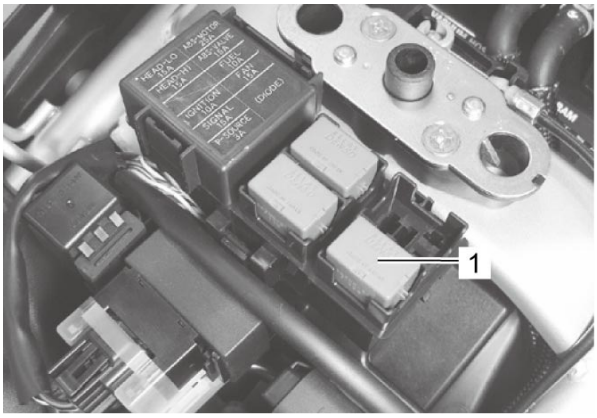

3) First, check for insulation with a circuit tester between terminals (3) and (4). Next, check for continuity between (3) and (4) with 12 V voltage applied, positive (+) to terminal (1) and negative (–) to terminal (2). If continuity does not exist, replace the relay with a new one.

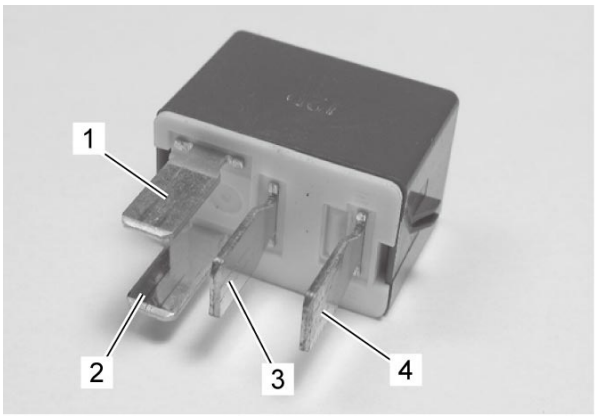

4) Reinstall the removed parts.