


Rear Fender (Rear) Cushion Construction

BENE31J19406073

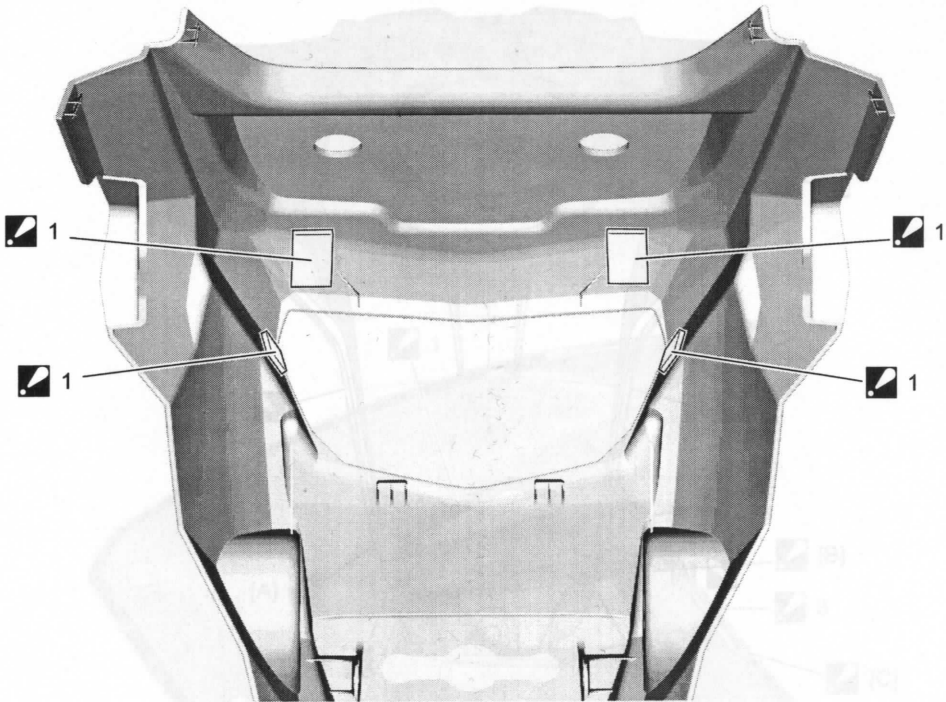


1. Rear combination light cushion
: Stick the cushion aligning with the emboss line.

IE31J1940048-03

Battery Box Cushion Construction

BENE31J19406074

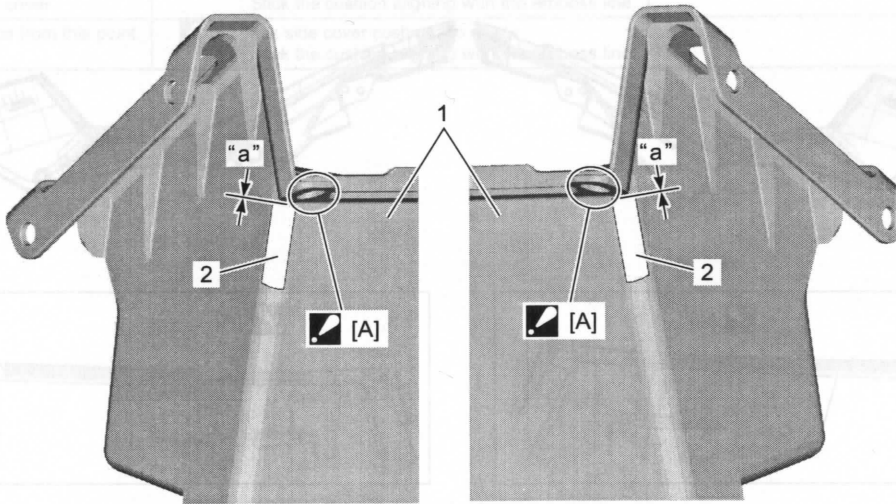

[A]: Align the edge of cushion at the center of hole.

2. Battery box cushion

1. Battery holder

"a": 0 mm (0 in)

IE31J1940049-02