


9D-18 Exterior Parts:

Installation

Install the windscreen brace in the reverse order of removal. Pay attention to the following point:

- Apply thread lock to the bolts (1) and tighten them.

"A": Thread lock cement 99000-32150 (THREAD LOCK CEMENT 1322D)

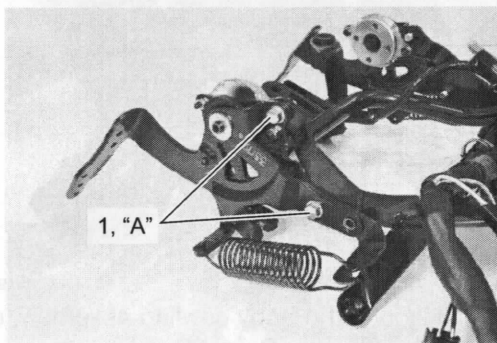

IE31J1940058-01

Pivot Cover Removal and Installation


BENE31J19406072

NOTE

To removal and installation the pivot cover, the same procedures is applicable to both the right and left covers.

Removal

- 1) Remove the pivot cover (1).

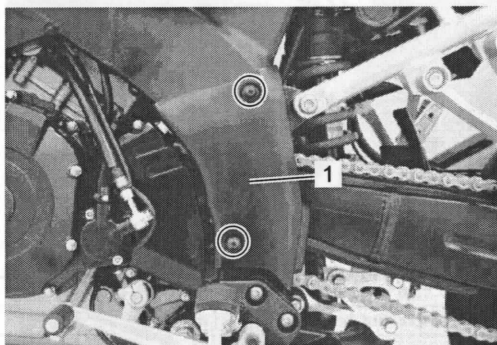

IE31J1940039-01

Installation


Install the pivot cover in the reverse order of removal.

Battery Holder Removal and Installation

BENE31J19406076

Removal

- 1) Remove the frame covers. (Page 9D-11)
- 2) Remove the battery. (Page 1J-10)
- 3) Remove the screws (1), bolts (2) and seat heat shield (3).
- 4) Remove the battery holder (4).

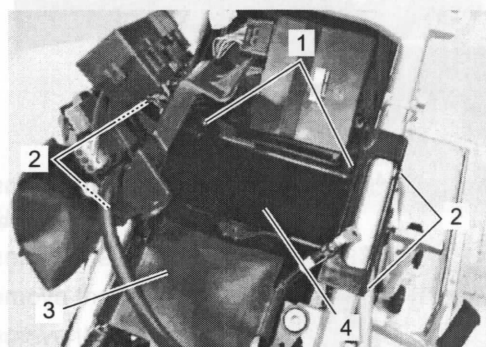

IE31J11A0025-01

Installation

Install the battery holder in order of removal.