




Throttle Cable Play On-vehicle Inspection and Adjustment

Inspection

Turn the throttle grip slowly and inspect the throttle cable play "a" at the periphery of the grip.

Throttle cable play "a"

2.0 – 4.0 mm (0.08 – 0.16 in)

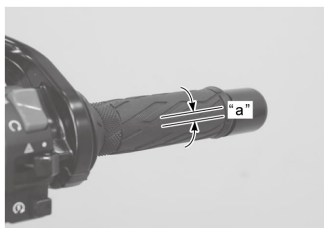

Adjustment

- 1) Remove the rubber boot (1).
- 2) Loosen the lock-nut (2) of the throttle pulling cable.
- 3) Turn the adjuster (3) in or out until the throttle cable play (at the throttle grip) is within the specification.

Throttle cable play

2.0 – 4.0 mm (0.08 – 0.16 in)

- 4) Tighten the lock-nut (2) while holding the adjuster (3).

⚠ WARNING:

After the adjustment is completed, check that handlebar movement does not raise the engine idle speed and that the throttle grip returns smoothly and automatically.



- 5) Reinstall the rubber boot.