










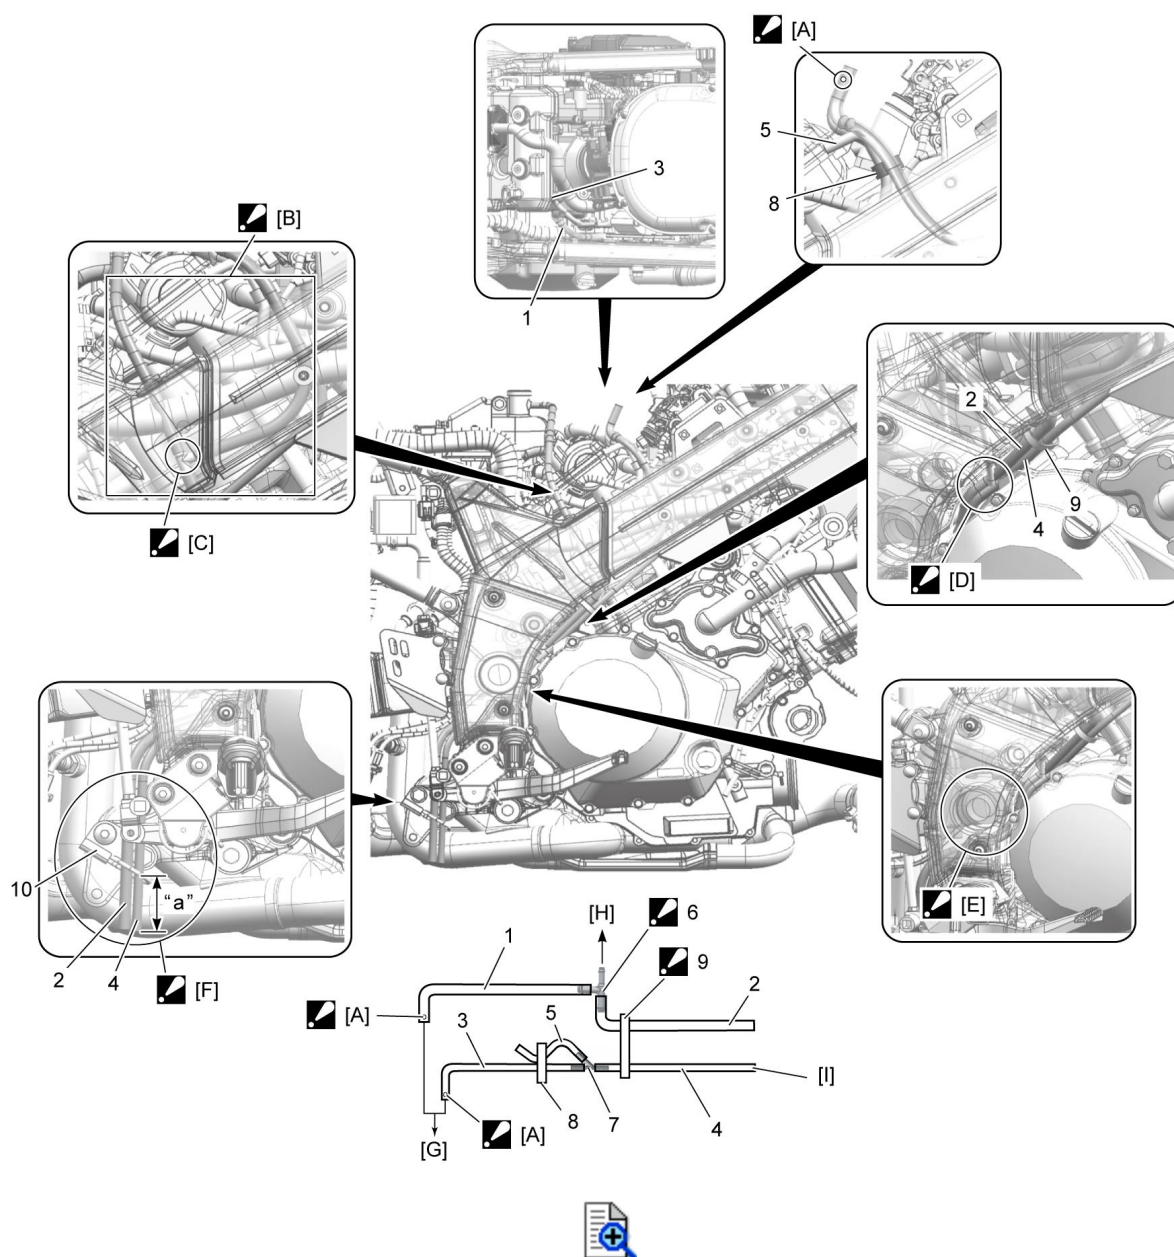

# Fuel Tank Water Drain Hose and Breather Hose Routing Diagram



|  |  |  |  |
|--|--|--|--|
|  [A]: | Face the white mark outside.   | 2.   | Fuel tank drain hose No. 2   |
|  [B]: | Pass the hoses between the cylinder head and wiring harness.                 | 3.   | Fuel tank breather hose No. 1  |
|  [C]: | Face the joint (to fuel tank) of 3 way joint forward.                        | 4.   | Fuel tank breather hose No. 2  |
|  [D]: | Pass the hoses between the engine mounting position and GP switch lead wire. | 5.   | Fuel tank drain hose No. 3   |
|  [E]: | Pass the hoses under of the swingarm pivot part.                             |  6. | Fuel tank drain 3 way joint : Connect the reservoir tank overflow hose to the narrow shaped side of joint. |

|  |  |  |  |
|--|--|--|--|
|  [F]: | Pass the hoses between the inside of brake pedal and EXCV cable. | 7.   | Fuel tank breather 3 way joint   |
| [G]:   | To fuel tank   | 8.   | Breather hose clamp  |
| [H]:   | To reservoir tank  |  9. | Hose clamp<br>: Clamp the hoses at marking position.<br>Face the tip of clamp upward and cut the tip after clamping. |
| [I]:   | Marking  | 10.  | Drain hose guide   |
| 1.   | Fuel tank drain hose No. 1                                       | "a":   | 40 – 60 mm (1.6 – 2.4 in)  |