


Combination Meter Assembly Removal and Installation

BENE31J19306003


Removal

- 1) Remove the clips (1) and screws (2).
- 2) Remove the meter panel (3).

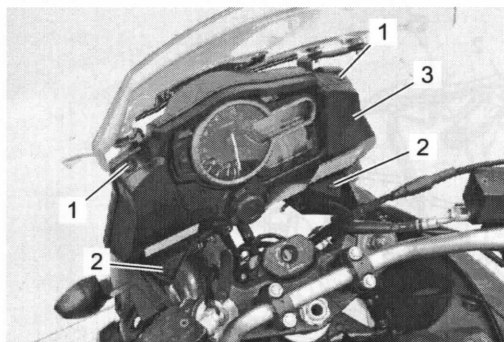


IE31J1930001-01

- 3) Disconnect the power source socket coupler (1) and combination meter coupler (2).

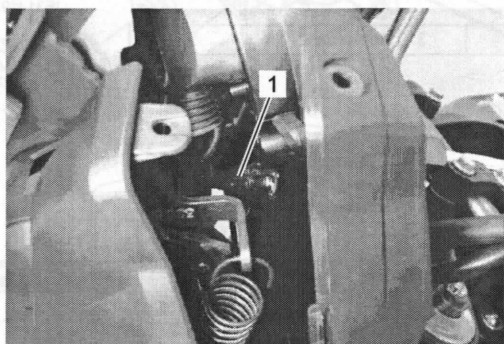


IE31J1930002-02

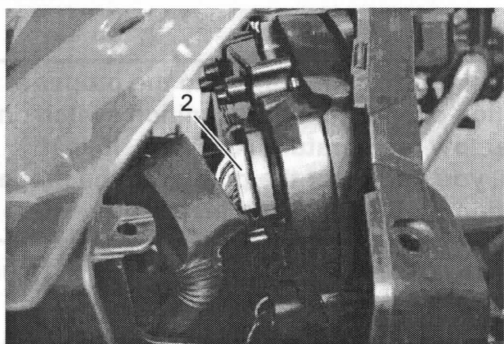


IE31J1930003-01

- 4) Remove the combination meter (1).

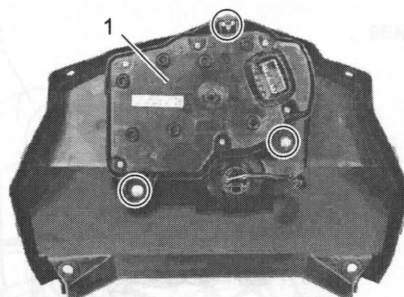

IE31J1930004-02

- 5) Remove the ring nut (1) and power source socket (2).

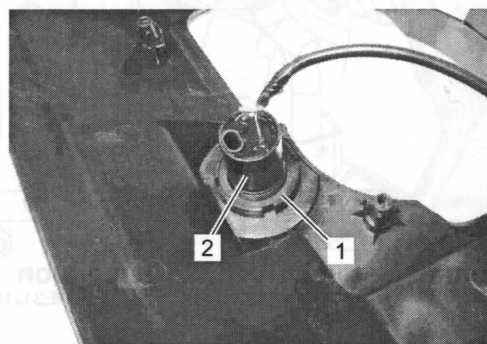


IE31J1930005-01

Installation

Install the combination meter in the reverse order of removal. Pay attention to the following points:

- Align the projection (1) of power source socket to the groove (2) of meter panel.

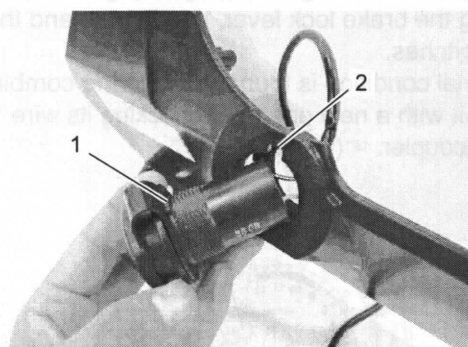

IE31J1930006-01