
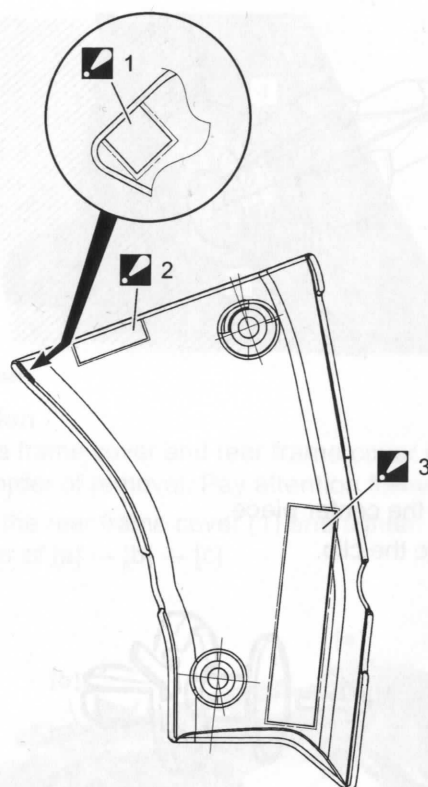


BENE31J19406005

Pivot Cover Cushion Construction

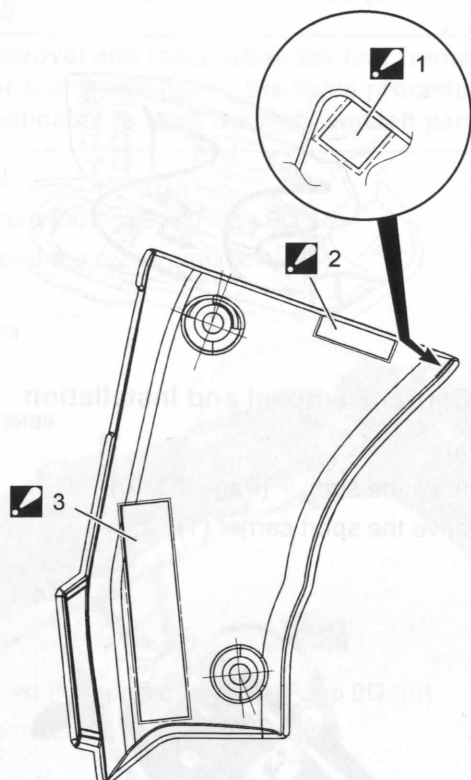

1. Pivot cover cushion No. 1
: Stick the cushion aligning with the end
of curved surface and emboss line.

2. Pivot cover cushion No. 2
: Stick the cushion aligning with the end
of curved surface and emboss line.

3. Pivot cover cushion No. 3
: Stick the cushion aligning with
the emboss line.


IE31J1940050-03

Clip Removal and Installation

BENE31J19406016

Type 1 Removal

- 1) Depress the head of clip center piece (1).
- 2) Pull out the clip (2).

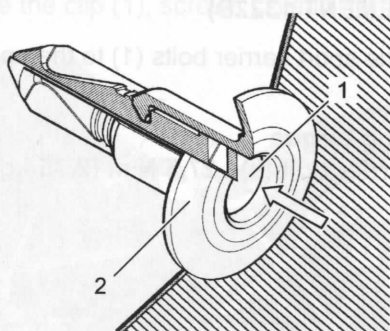


ID26J1940192-01

Installation

- 1) Let the center piece stick out toward the head so that the claws (1) closes.
- 2) Insert the clip into the installation hole.

NOTE

To prevent the pawl (1) from damage, insert the clip all the way into the installation hole.

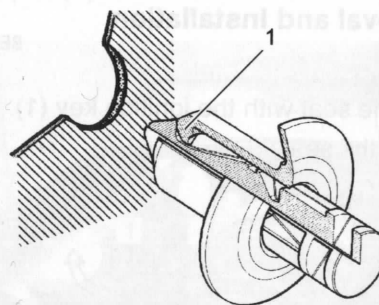

ID26J1940160-01